



Order #XXXXX ECO-56C Wirelss Charging Table

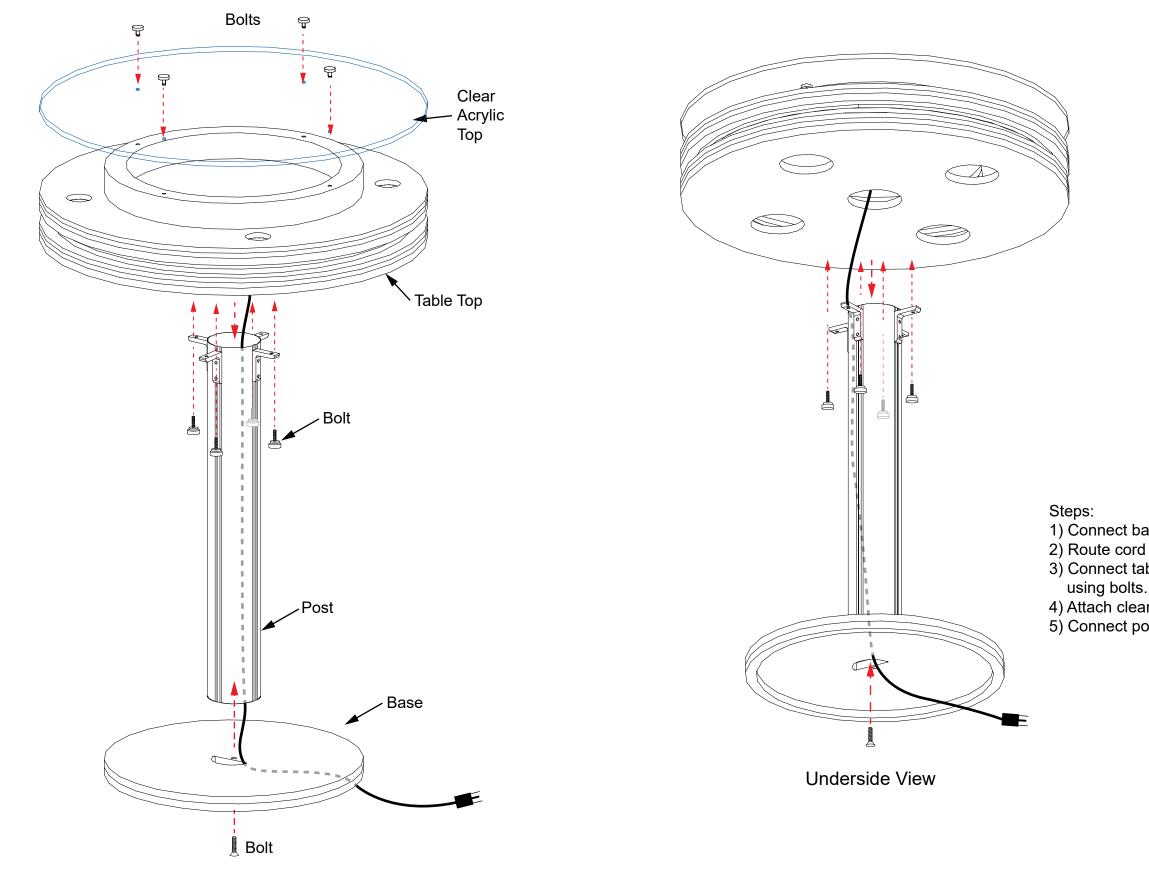

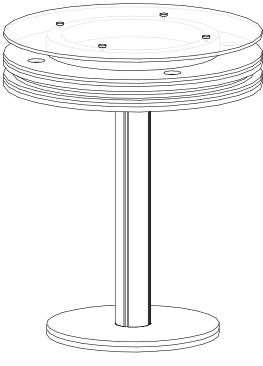

Completed Assembly

1) Connect base to post, using bolt.

2) Route cord from table top through post and base.3) Connect table top to post, with fixed brackets, using bolts.

4) Attach clear acrylic top to table top, using bolts.5) Connect power cords to LED lights & wireless chargers.

SETUP INSTRUCTIONS

General Setup Instructions


- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a MILD NON-ABRASIVE cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure. Heat and UV exposure will warp and fade components.
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

Disassembly


- For loss prevention, tighten all set screws and locks during disassembly.

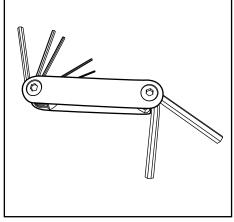


Hex Tool - Essential for Assembly

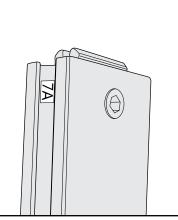

Part Identification - Numbering

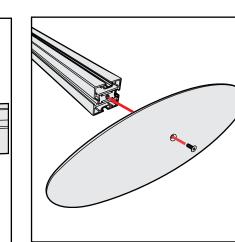


Base Plate & Extrusion Connection

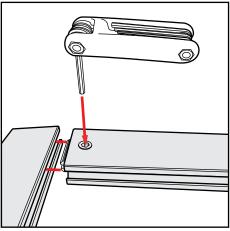

Spline Connection

Extrusion & Lock Connection

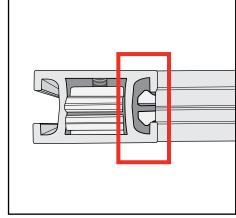

Engaged Lock







Static Mode:

- 1. Use the Color Ring key to select a color.
- 2. Saturation is controlled with W/R/G/B keys.
- 3. White mode is available by long-pressing 'ON' key. 4. Colors (not white) are dimmable with the Brightness key.

Dynamic Mode:

- Press "M" key to cycle through the following options: 1. White light fades in and out.
- 2. Several colors fade in and out
- 3. R,G,B three colors fade in and out.
- 4. R,G,B three colors flash. 5. Six colors flash.
- 6. Random color flashes.
- 7. Red color fades in and flashes.
- 8. Green color fades in and flashes. 9. Blue color fades in and flashes.

To Pair a Remote with Multiple Units: 1. Power on the lights.

2. Press 'ON' key within 3 seconds. 3. Lights will blink when link is made. To unpair: Long press 'ON' key within 3 seconds after switching on lights.

Remotes can be paired with one or more receivers. Different receivers can work synchronously even when started at different times (within 30 min).


WARNING

DO NOT USE POWER TOOLS

LADDERS OR LIFTS MAY BE REQUIRED

ALL CONNECTIONS MUST **BE TIGHTLY SECURED**



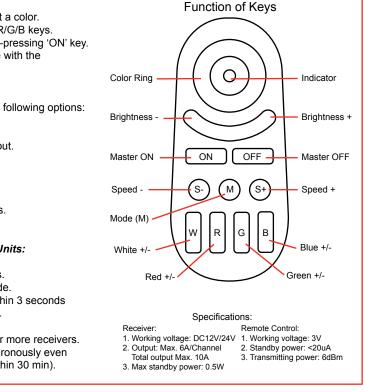



Order #XXXXX Crate Packing

CRATE PACKING

Crate 1 of 1